

## A/T SHIFT KNOB

97-06 WRANGLER TJ

D-JP-180023-BK



### TOOLS REQUIRED

- 2.5mm Allen Bit

### SKILL LEVEL

- Novice  
- 1 (you)

Little skill level required, you can easily install it by yourself.

### TIME REQUIRED

- .5 Hour

Time to install this should only take about half an hour.

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.



**STEP 1** | Insert the key into vehicle and press the brake pedal to allow the shift button to be depressed.



**STEP 2** | To remove the shift handle, press the button and pull up with force. It may help to put it in first gear, and pull backwards, instead of up.

If you take it out of park, be sure to set the parking brake and keep the brake pedal depressed.



## INSTALLATION MANUAL

---


**STEP 3** | Use a 2.5mm allen bit to back out the set screw about one full turn.

Be careful not to remove the screw, as it is very easy to lose.



**STEP 4** | Slide the DV8 shift knob in place and tighten the set screw using a 2.5mm allen bit.

Check the function of the brake release/button to ensure it engages with the shift cable properly.

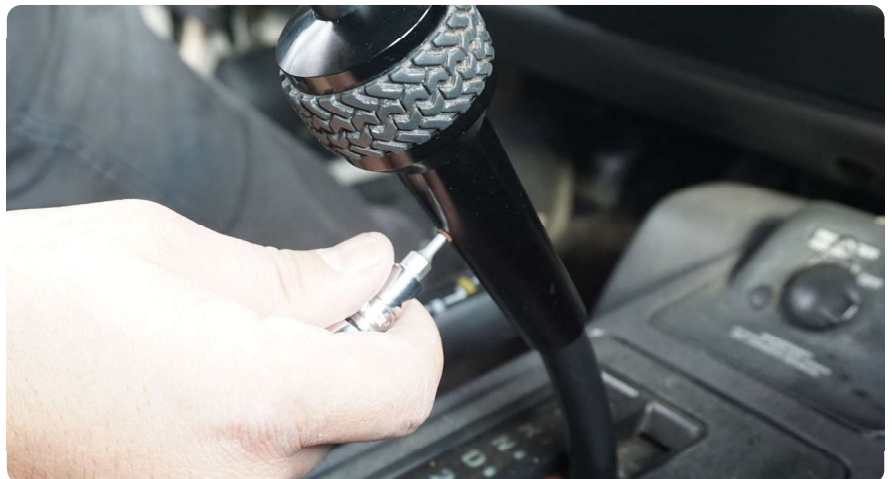

**STEP 5** | Congrats! You are finished with the install of the DV8 Shift Knob!

