

Anleitung zur Befestigung des Kunststoffseiles 10-118530 u.10-118538 an WARN - ZEON Seilwinden.

Manual ,how to install the synthetic rope 10-118530 u. 10-118538 to the WARN – ZEON winches.

AL 2026 - 00



1



2




3




4



5

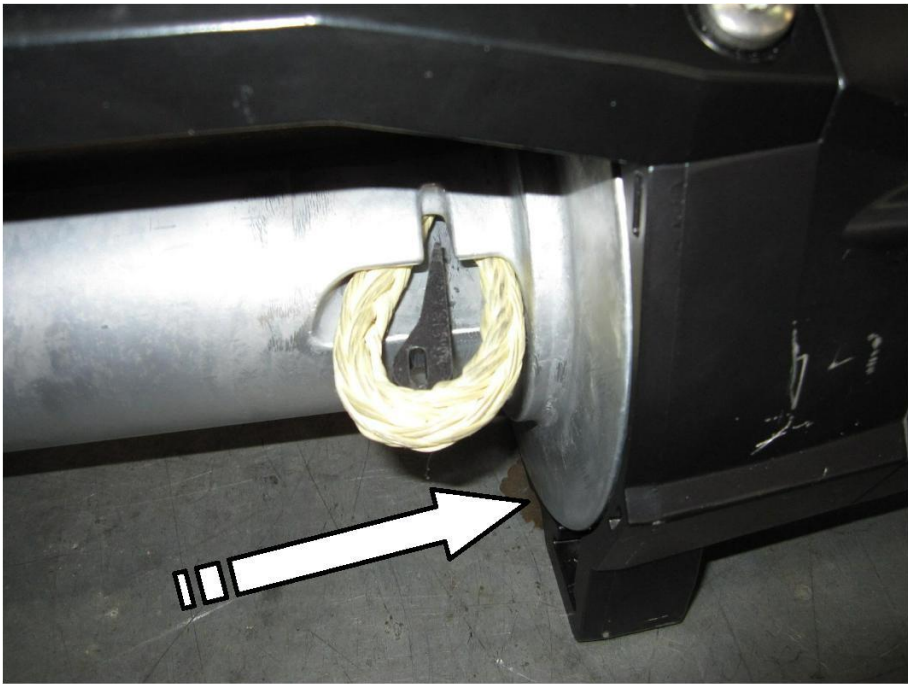

6

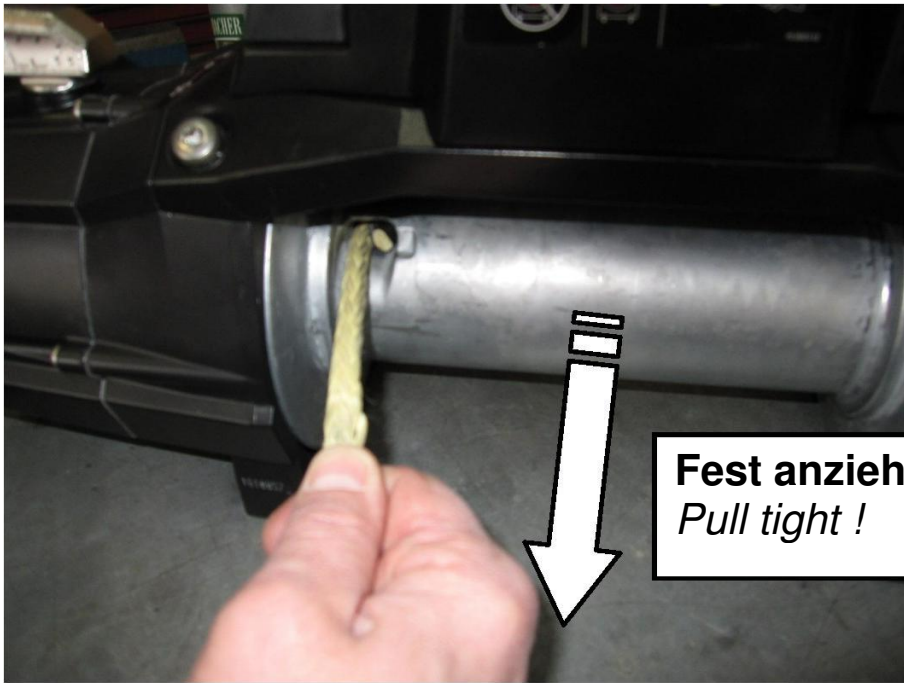

7



8